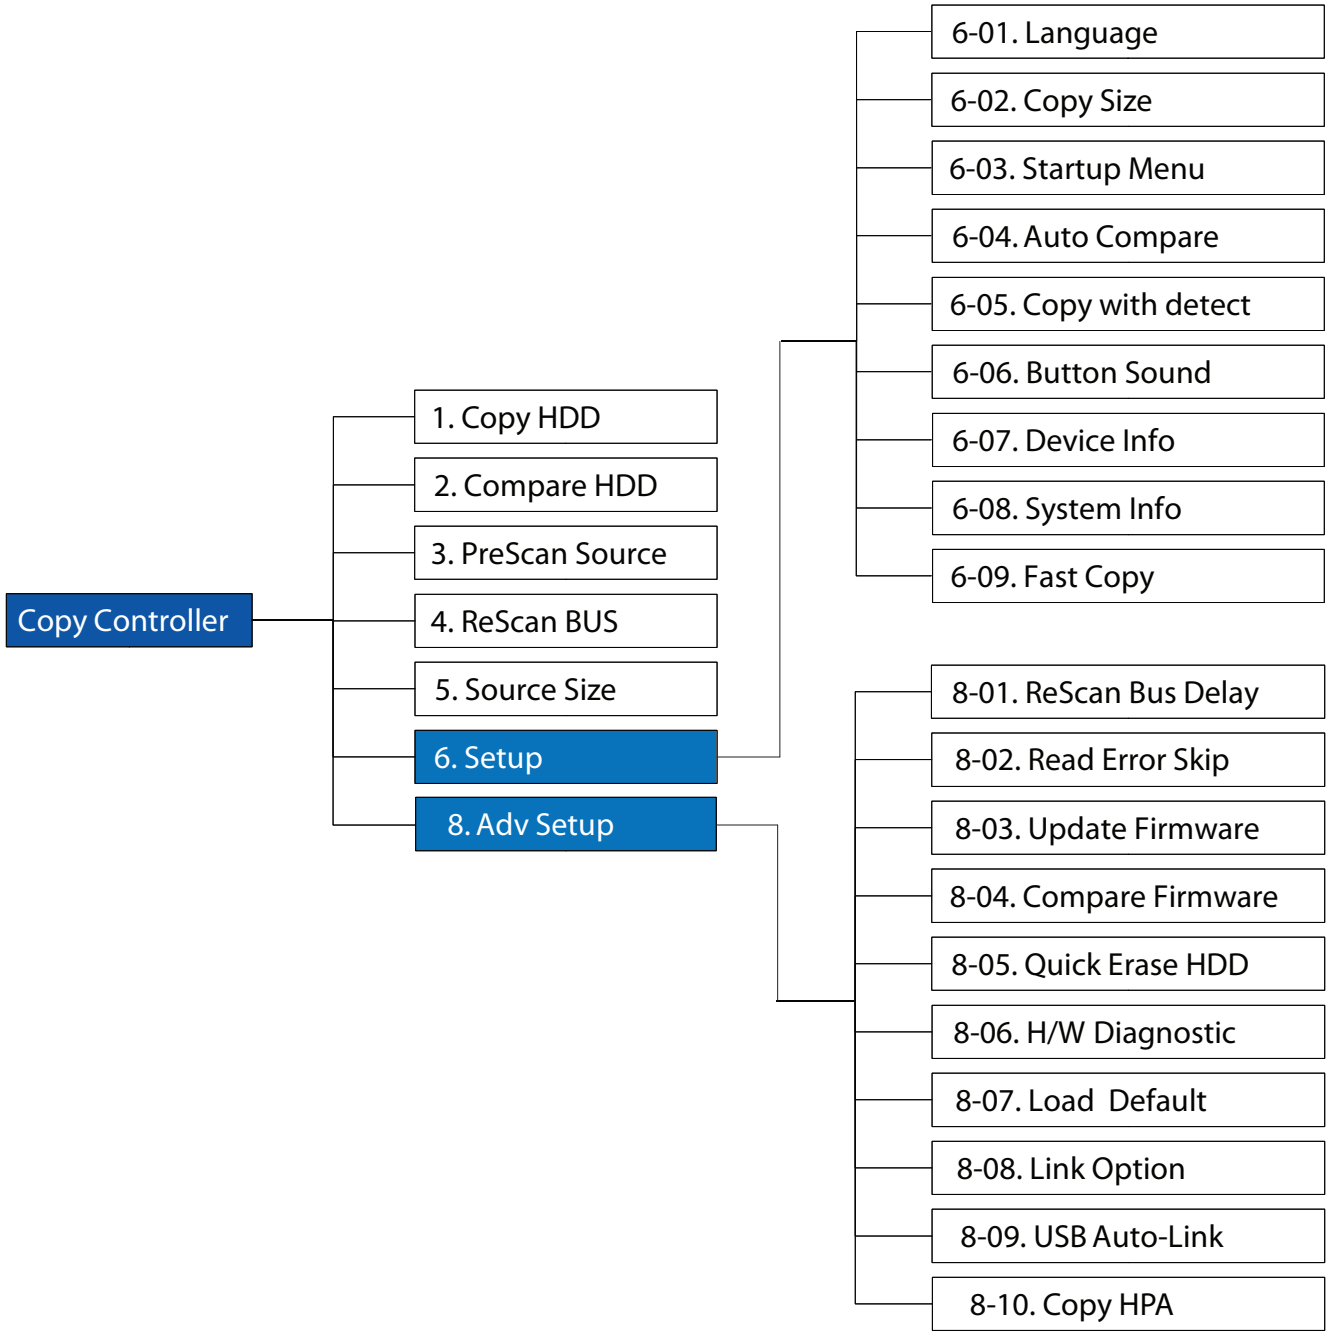
Copy Controller
1. Copy HDD
2. Compare HDD
3. PreScan Source
4. ReScan BUS
5. Source Size
6. Setup
8. Adv Setup
6-01. Language
6-02. Copy Size
6-03. Startup Menu
6-04. Auto Compare
6-05. Copy with detect
6-06. Button Sound
6-07. Device Info
6-08. System Info
6-09. Fast Copy
8-01. ReScan Bus Delay
8-02. Read Error Skip
8-03. Update Firmware
8-04. Compare Firmware
8-05. Quick Erase HDD
8-06. H/W Diagnostic
8-07. Load Default
8-08. Link Option
8-09. USB Auto-Link
8-10. Copy HPA